

## ❖ CM-140 GE / CB-140 GE

Progressive Scan



# PRELIMINARY

- Member of Compact series, covering VGA to UXGA resolution
- 1380 (h) x 1040 (v) 4.65  $\mu\text{m}$  square pixels
- 1/2" progressive scan - Monochrome and Bayer mosaic color versions
- 31 frames/second with full resolution in continuous operation
- 30 frames/second with external trigger and full resolution
- Increased frame rate with vertical binning (CM-140 GE) and partial scan
- Exposure time from 32  $\mu\text{s}$  to 2 sec. using Pulse Width trigger mode
- Programmable exposure from 64  $\mu\text{s}$  to 40 ms
- Sequencer trigger mode for on-the-fly change of gain, exposure and ROI
- LVAL-synchronous/-asynchronous operation (auto-detect)
- Auto iris lens video output allows a wider range of light
- GigE Vision interface with 10 or 8-bit output
- Programmable GPIO with opto-isolated inputs and outputs
- Comprehensive software tools and SDK for Windows XP/Vista

**GigE**™  
VISION




# Specifications for CM-140 GE / CB-140 GE

PRELIMINARY

Specifications	CM-140 GE / CB-140 GE
Sensor	1/2" progressive scan
Pixel Clock	65 MHz
Frame rate full frame	31.08 frames/second (1052 lines per frame)
Active area	6.4 (h) x 4.8 (v) mm
Cell size	4.65 x 4.65 pixels
Active pixels	1380 x 1040
Color (CB-140 GE)	Raw Bayer output, host-based interpolation
Read-out modes	Raw Bayer output, host-based interpolation
Full	1380 (h) x 1040 (v) 31.08 fps
1/2 partial scan	1380 (h) x 520(v) 46.57 fps
1/4 partial scan	1380 (h) x 269 (v) 61.92 fps
1/8 partial scan	1380 (h) x 130 (v) 73.97 fps
2/3 partial scan	1380 (h) x 694 (v) 39.97 fps
Vertical binning	1380 (h) x 527 (v) 48.86 fps*
Region-of-interest (ROI)	User definable. Memory read-out *NOTE: CM-140 GE only
Sensitivity (CM-140 GE)	0.3 Lux (On sensor, max. gain, shutter off, 50% video)
Sensitivity (CB-140 GE)	1.6 Lux (On sensor, max. gain, shutter off, 50% video)
S/N ratio	>50dB (odB gain)
Video output	GigE Vision, 8-bit or 10-bit
Auto-iris lens video output	0.7 Vp-p, enabled by internal switch
Gain	Manual, -3 to +12 dB
Synchronization	External hardware trigger via GPIO Software trigger via GigE Vision
GPIO Module	Configurable 12-in/9-out switch (LUT) 12-bit counter based on 25MHz clock or Pixel Clock
Input/output switch	
Clock generator (one)	
Pulse generators (four)	20-bit counters programmable for length, start point, stop point, repeat
Hardware trigger modes	Continuous Pre-Select Pulse Width Sequence (Gain, Shutter, ROI)
Electronic shutter	
Pre-set shutter	1/24 to 1/10,000 in 10 steps
Programmable exposure	2L (64µs) to 1052L (40ms) in 1L steps
Exposure Time (Abs)	µsec - user definable. Same range as PE
Pulse Width	32µs to 2 sec.
Control interface	Register based. GigE Vision/GenICam compliant
Functions controlled via GigE Vision interface	Shutter, Gain, Black level, Trigger mode, Readout mode, GPIO setup, ROI (GenICam mandatory functions)
GigE Vision streaming control	Packet size, Delayed (frame) Readout, Inter-packet delay
Indicators on rear panel	Power / Hardware trigger, GigE link, GigE activity
Operating Temperature	-5°C to +45°C
Humidity (operation)	20 - 90% non-condensing
Storage temp./humidity	-25°C to +60°C / 20 to 90%
Vibration	10G (20Hz to 200 Hz XYZ)
Shock	70G
Regulations	CE (EN 61000-6-2, EN-61000-6-3), FCC part 15 class B, RoHS/WEEE
Power	12V DC +/-10%. 3.5W
Lens mount	C-mount
Dimensions (H x W x L)	29 x 44 x 75 mm
Weight	TBD g

## Connector pin-out

### DC In / GPIO

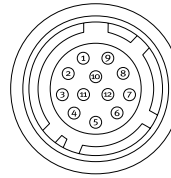


HIROSE HR10A-10R-12PB-01

### Connector Pin-out

Pin 1	GND
2	+12 V DC input
3	Opto in 2(-)*
4	Opto in 2(+)*
5	Opto in 1(-)
6	Opto in 1(+)
7	Opto out 1(-)
8	Opto out 1(+)
9	Opto out 2(-)
10	Opto out 2(+)
11	+12V DC input
12	GND

\* Pins 3 and 4 can be configured as Auto-iris lens video output. Selectable by switch


### GigE Vision interface RJ-45 with locking screws



GigE


Pin 1	TRD+(0)	5	TRD-(2)
2	TRD-(0)	6	TRD-(1)
3	TRD+(1)	7	TRD+(3)
4	TRD+(2)	8	TRD-(3)

## Spectral Response CM-140 GE /

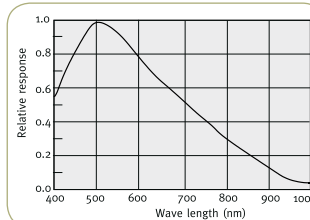


## Dimensions


### Front view

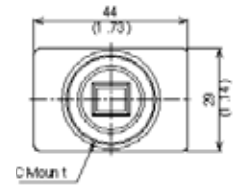


### Side view

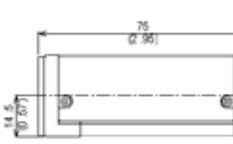


### Bottom view

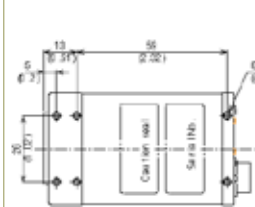

### Rear view

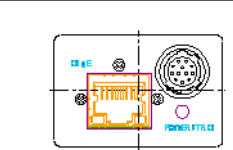

## Spectral Response CM-140 GE /

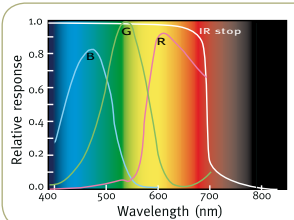

## Ordering Information

CM-140 GE 1/2" Monochrome Progressive Scan Camera  
CB-140 GE 1/2" Bayer Mosaic Color Progressive Scan Camera

Europe, Middle East & Africa  
Phone +45 4457 8888  
Fax +45 4491 8880

Asia Pacific  
Phone +81 45 440 0154  
Fax +81 45 440 0166

Americas  
Phone (Toll-Free) 1 800 445 5444  
Phone +1 408 383 0300



See the possibilities

Visit our web site on [www.jai.com](http://www.jai.com)

Company and product names mentioned in this document are trademarks or registered trademarks of their respective owners. IAI AS cannot be held responsible for any technical or typographical errors and reserves the right to make changes to products and documentation without prior notification.

3104810.06.07.3900